




1-800-248-0280  
831 Morley Drive  
Saginaw, MI 48601

DETAIL E2071

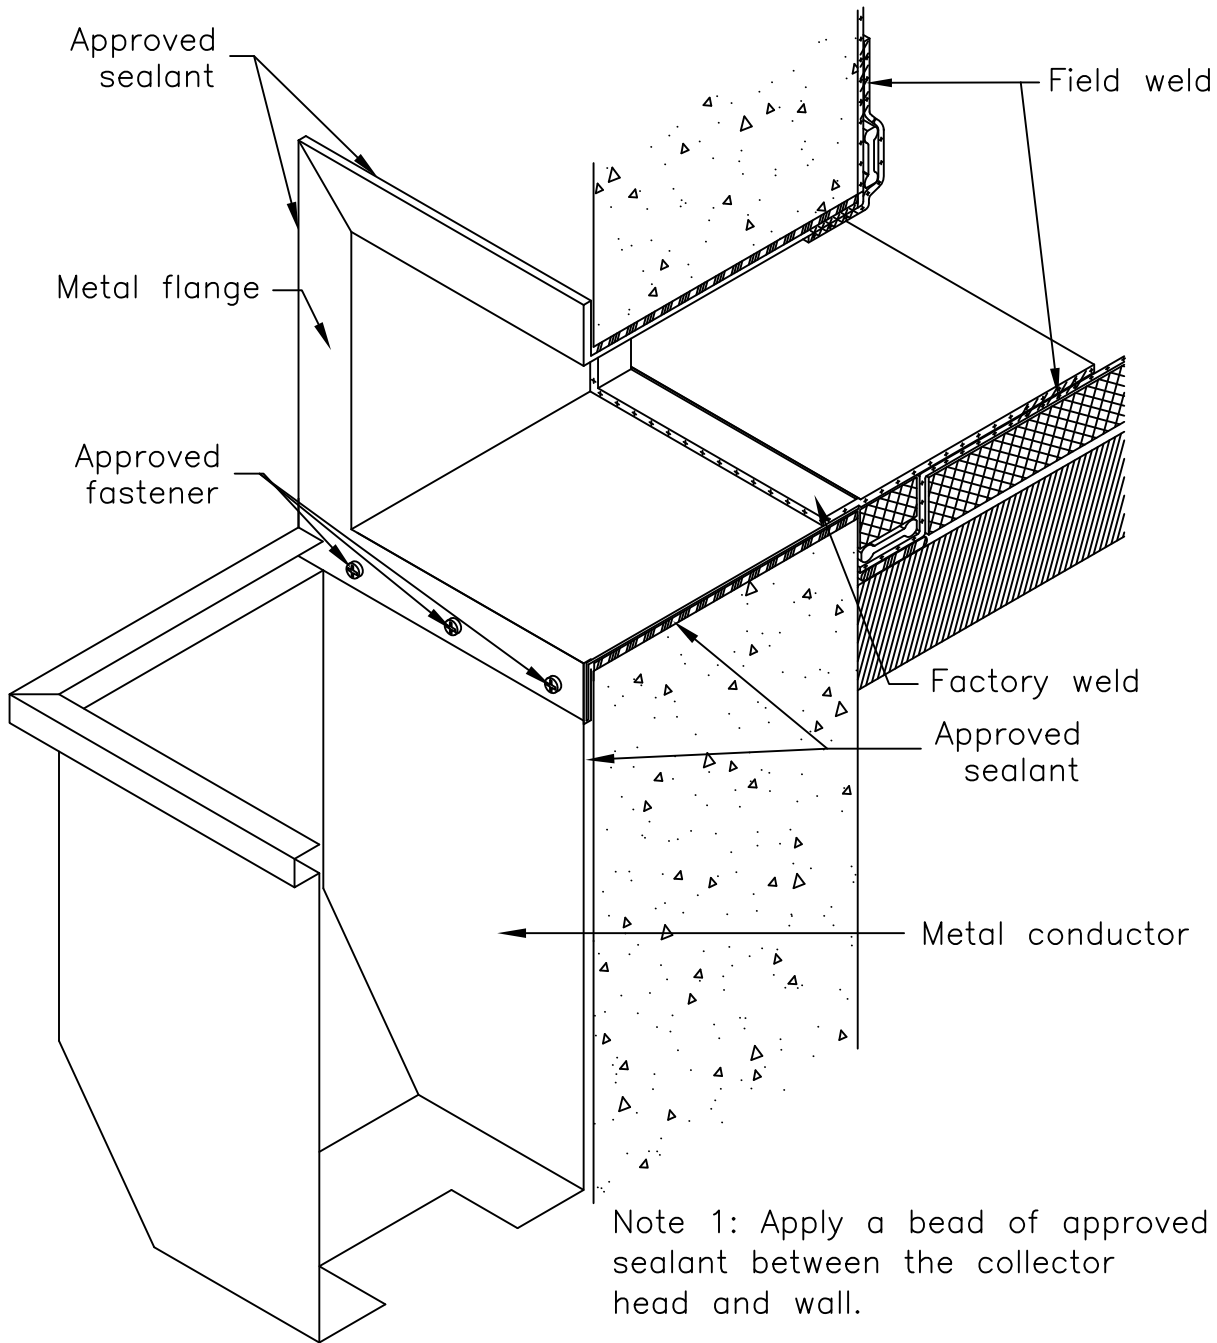

Note 1: Apply a bead of approved sealant between the collector head and wall.

Note 2: Back seal and fasten top flange of collector 6-inches on center.

Note 3: See Detail 2060 for interior wall termination.

DATE: JANUARY 2013

DRAINAGE DETAILS

DRAWN BY: ENG. DEPT.

FLANGED SCUPPER W/CONDUCTOR

SCALE: NONE

NEW CONSTRUCTION OR RE-ROOF