




1-800-248-0280
831 Morley Drive
Saginaw, MI 48601

DETAIL E2091

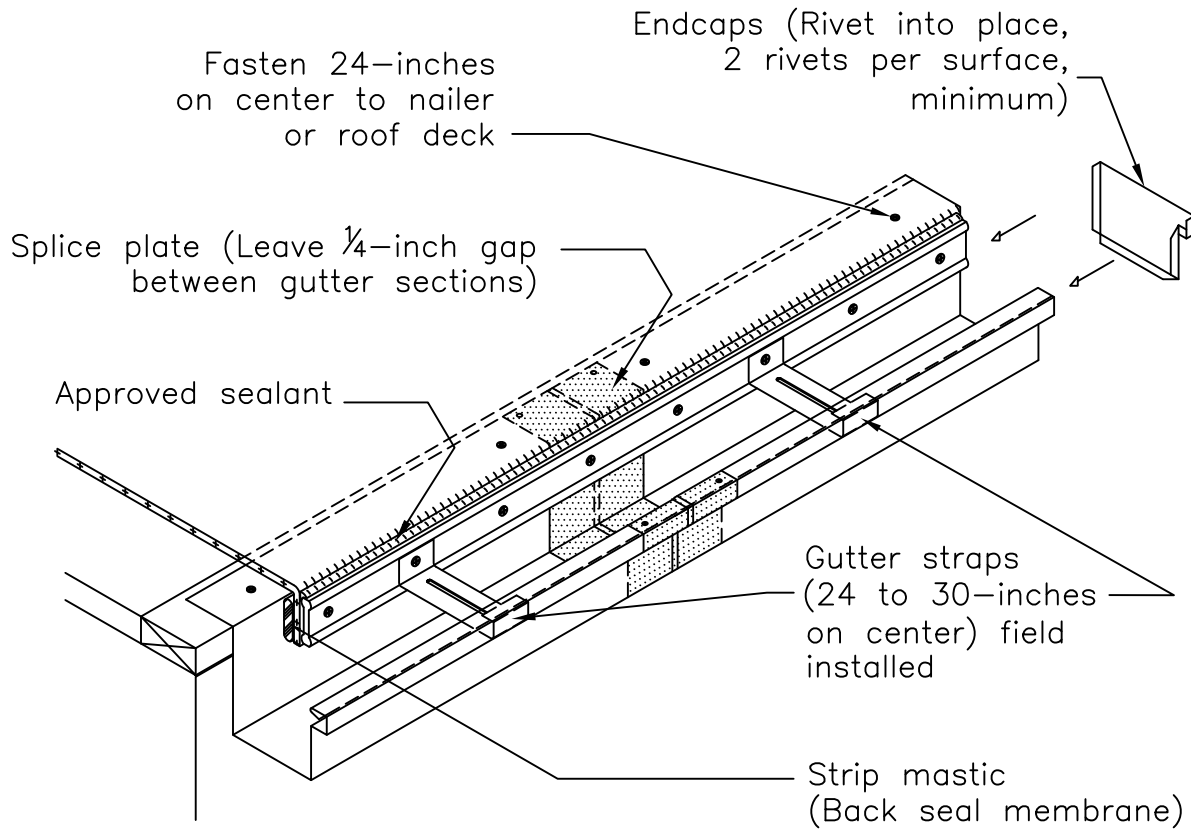

NOTE 1: All joints, splices, corners, and endcaps are to be riveted into position. On splice plates, a minimum of 2 rivets and 2 fasteners are to be used.

NOTE 2: All joints, splices, corners and endcaps must have approved sealant applied to them to ensure a watertight application. Apply a bead of approved sealant to the splice plate on both sides of the joint.

NOTE 3: One expansion joint should be installed for every 40–50 feet of gutter being installed. (Detail 2095)

NOTE 4: Drainage slope and drain sizes are to be determined by local building code requirements and are the responsibility of the contractor to follow.

DATE: JANUARY 2013

DRAINAGE DETAILS

DRAWN BY: ENG. DEPT.

GUTTER ATTACHMENT X-SERIES

SCALE: NONE

NEW CONSTRUCTION OR RE-ROOF