



1-800-248-0280
831 Morley Drive
Saginaw, MI 48601


DETAIL E3560

Approved sealant

2-Piece Compression
Metal Cover

Fascia
Base

Stagger #14 screws
6-inches on center
using pre-punched
holes on Fascia Base.

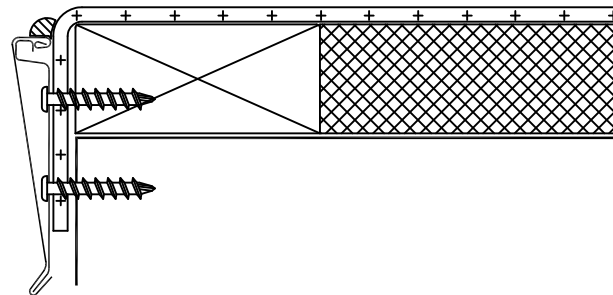

Note 1: Do not use this detail for fully adhered applications unless the membrane is back sealed using approved sealant or strip mastic.

Note 2: A $\frac{1}{4}$ -inch gap is required between sections of Fascia Base. Joints on the Fascia Base must be offset by a minimum of 12-inches from the joints in the metal cover.

Note 3: A wood nailer is required if 1-inch of insulation or greater is used. Top of wood nailer to be flush with top of insulation. Fasteners used to attach wood nailers shall be spaced no greater than 18-inches on center. The Fascia Base system is not to be installed as a gravel/water stop.

Note 4: This edging is available in 4-inch through 8-inch dimensions.

DATE: JANUARY 2013

METAL EDGE DETAIL

DRAWN BY: ENG. DEPT.

4 to 8-INCH FASCIA BASE

SCALE: NONE

NEW CONSTRUCTION OR RE-ROOF