




1-800-248-0280
831 Morley Drive
Saginaw, MI 48601

6056 INSTALLATION

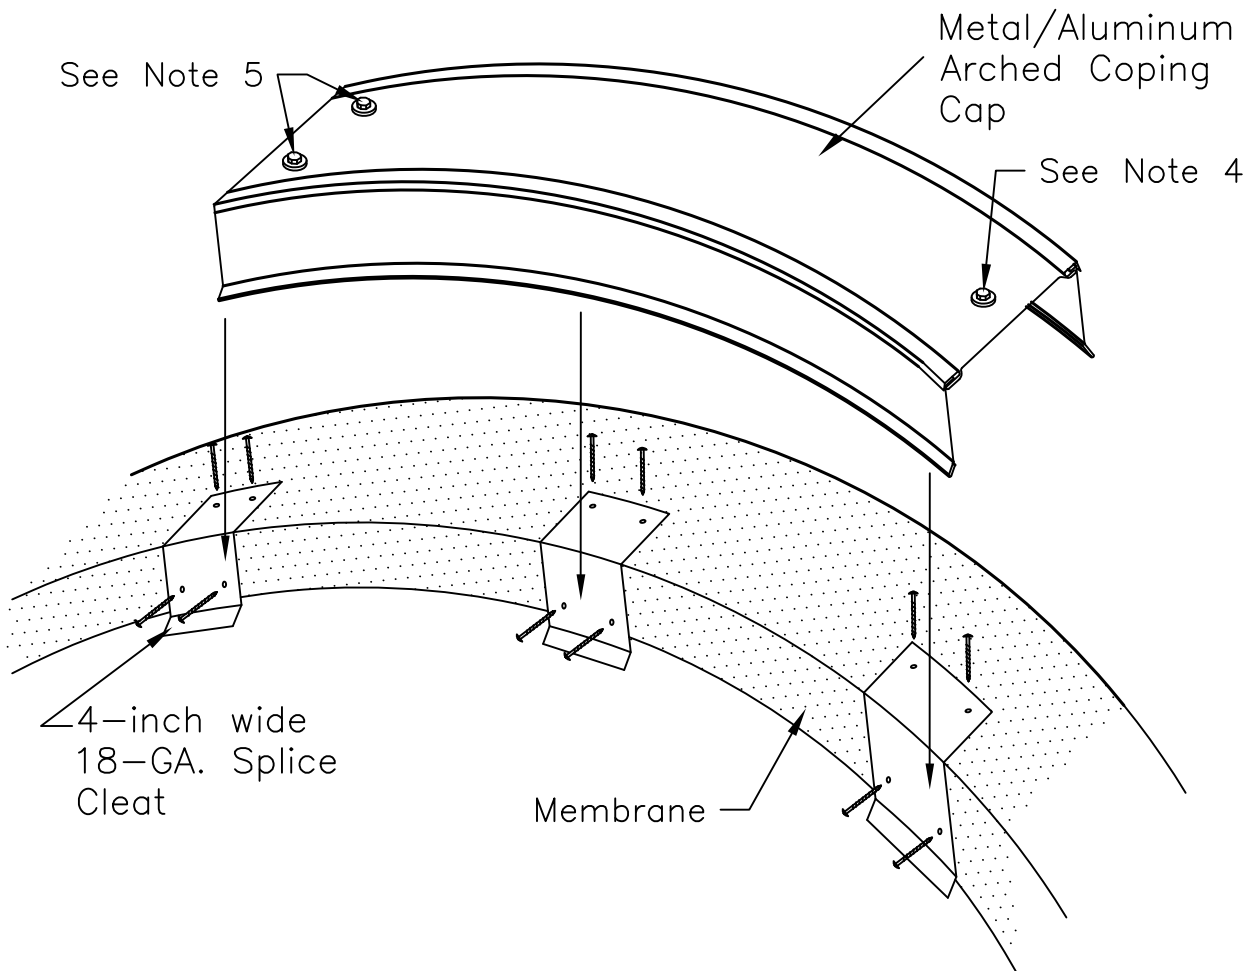

- Note 1: Install 4-inch wide Splice Cleats 24-inch on center using four approved fasteners (must position a cleat at each joint).
- Note 2: When more than one Arched Coping Cap is used, install the cap to shed water down the arch by centering one section at the top of the arch.
- Note 3: Additional Arched Coping sections are pre-notched to provide an overlapped joint. Apply an approved sealant at all coping joints.
- Note 4: Coping 16 to 24-inches wide will require a row of hex-head screws with neoprene washers in the center.
- Note 5: Coping 25-inches or wider shall require two rows of hex-head screws with neoprene washers. All fasteners shall be installed at 18-inches on center along the length of the coping.

DATE: JANUARY 2013

PARAPET WALL DETAIL

DRAWN BY: ENG. DEPT.

ARCHED COPING W/SPLICE CLEAT

SCALE: NONE

NEW CONSTRUCTION OR RE-ROOF